

HD Guide

User Manual



Shaw)

You've decided you want better TV. Here's how to enjoy it.

Welcome to Shaw HD TV. To get the most out of your experience, it's best to know absolutely everything the service offers. Start exploring today and you'll find better and more convenient ways to entertain yourself. This guide contains all of the information, operating instructions and tips to help you get to the good stuff.

Table of Contents.

Key features	4
Using the Shaw Remotes	6
Main menu	8
Quick menu	9
HD programming guide	9
Finding what you want to watch	10
Browse while watching TV uninterrupted	12
Searching the guide	13
Reminders	13
Recordings	14
Managing Recordings	18
Favourites	22
Shaw On Demand	24
Events	26
Digital Music	26
Adjusting your settings	27
Parental controls	30
More support	31
Warranty	31

 
Key features of your HD guide

No need to search for the HD channel anymore

HD Grouping: You can adjust your setting so that all HD channels are grouped together at the beginning of the channel listings.

Auto HD: The days of searching your guide for the HD version of a channel are over. Now, when you are subscribed to both the SD and HD version of a network, you will automatically receive the high-definition feed on the lower channel number. This ensures you always receive the best picture quality available. Simply look for the HD icon next to the channel number.

To change your default settings, see page 28 for instructions.

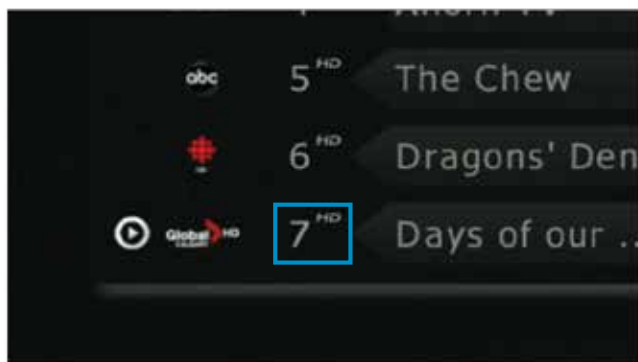

Find your content fast

What you see is what you get: Duplicate and unsubscribed channels are removed to save time when scrolling through the guide.

Favourites: It's way more than favourite channels. You can use pre-set lists like "Sports", "Kids", "Movies" and much more.

To learn more about Favourites, go to page 22.

The best on demand experience

 
Access to the entire Shaw On Demand library: Access over 10,000 titles all with the click of your remote.

Catch up on your favourite shows with easy access to Shaw On Demand:

Instantly access Shaw On Demand right from the guide on channels that feature On Demand content with the VOD quick launch. Tuned to Global to find you missed last week's Survivor episode? Press **⏮ ARROW** key in the guide and view past episodes available. The new guide makes catching up on your favourite TV shows even easier.


Look for the On Demand icon  **next to the channel number.**

To learn more about Shaw On Demand, go to page 24.

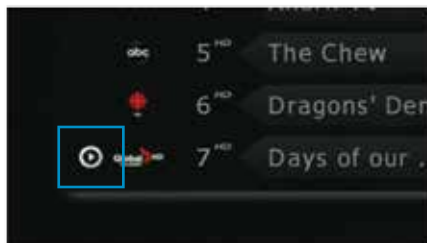

Customized guide views

 Full Screen Guide: Adjust the transparency of this guide in your Settings so you can browse the TV listings in high-definition while viewing your current show in the background.

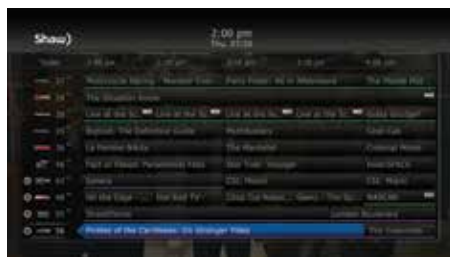

Traditional Guide: This view is similar to the guide you're used to. Instantly see what's airing right now and into the future while watching your favourite show in the corner of the screen.



 
Mini Guide: Browse while viewing your programming uninterrupted.

Learn how to set your default guide view on page 27.



Using the remote


The Shaw HD Remote

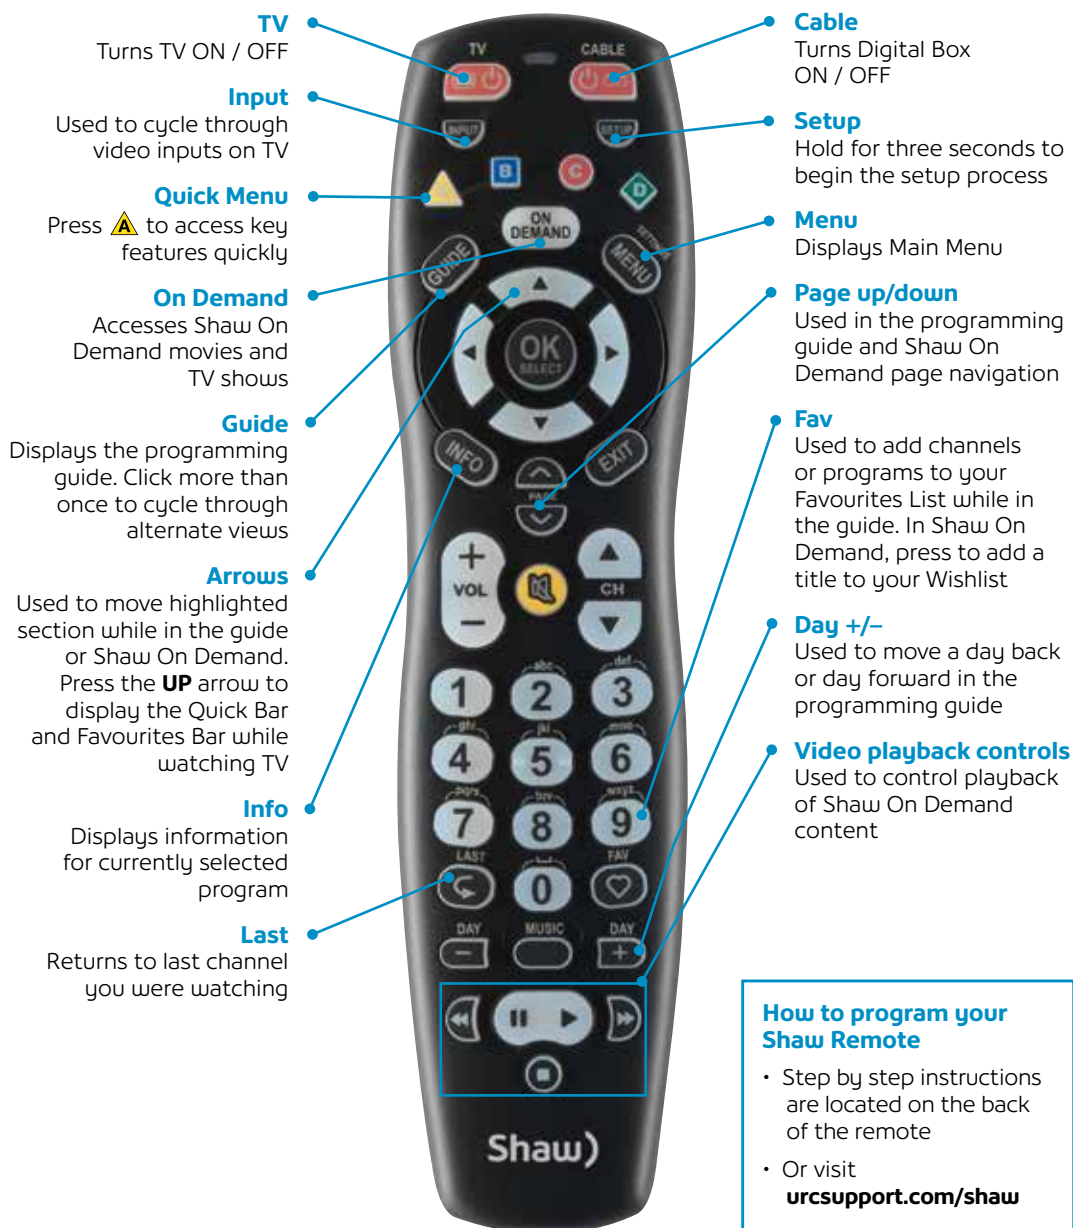

For more information

- **Shaw Remotes:** Press the **MENU** button, select "Help" and select "Shaw Remotes"
- **HD Guide Tips & How-to Videos:** Press the **MENU** button, select "Settings" or "Help". Or visit shaw.ca/hdguide

 The Shaw HDPVR Remote

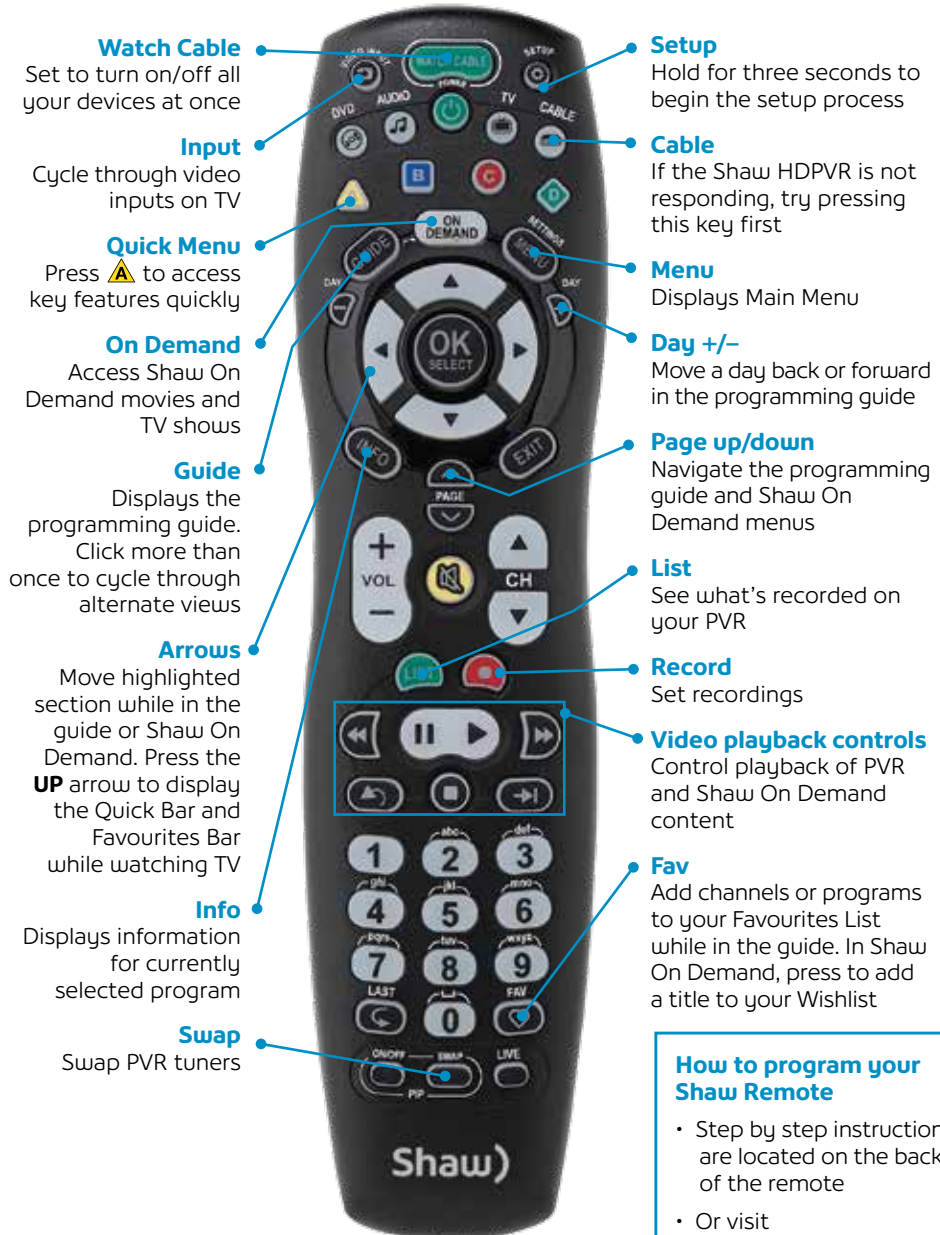

How to program your Shaw Remote

- Step by step instructions are located on the back of the remote
- Or visit urcsupport.com/shaw

Main menu

For easy access to all of your HD Guide features, simply press **MENU** on your remote, then select from the options available, including Shaw On Demand, Events, Favourites, Settings and more. You can even order movies from Shaw On Demand right from the Main Menu.

These icons will appear in the Main Menu. Highlight and select an icon with your remote and you will immediately access the area indicated.



Events: Enjoy instant access to all of our Pay Per View events.



Shaw On Demand: Catch up on your programs or watch a flick.



Recordings: Directly access your recordings, scheduled recordings, series management, PVR Settings and more.



Search: Easily look for a specific program by actor, title or description.



Watch TV: Select this to view the channel you were last tuned to.



Guide: Easy access to the on-screen programming guide.



Favourites: Select this icon to create a new customized Favourites list. New and previously created customized Favourites lists and eight pre-set lists (HD, Kids, Movies, Sports, Reality, Drama, Comedy, News) are also located on the same row.



Help: The help feature will provide you with all of the solutions you're seeking including various "How-to" videos.



Settings: View and customize your current settings or watch a variety of "How-to" videos to get you started.




My Orders: Quick access to your recently ordered Shaw On Demand content.



Wishlist: Easily access your current Shaw On Demand Wishlist.

Quick menu

Take a shortcut on your way to the key features of your HD programming guide. Simply press the  button on your remote once and the Quick Menu will appear over any video or guide screens. It's designed to allow you to quickly access applicable guide features.

The Quick Menu changes and customizes your options depending on what you're currently doing.

Live TV



On Demand



HD programming guide

This quickly answers the age-old question, “What’s on TV?” The on-screen programming guide is your source for finding out what to watch; up to 2 weeks of listings are available in the guide. Press **GUIDE** on your remote to access TV Listings and TV on demand. The first press brings you to the Full Screen Guide, second press is the Traditional Guide and the third press brings up the Mini Guide.



Finding what you want to watch

There are many ways to find the programs you want to watch:

 
- 1. Browse by Guide:** To see all programming on every channel you subscribe to, press **GUIDE** and use the **ARROWS** to move from one channel to another or press **PAGE UP/DOWN** to scroll through multiple channels at a time. Pressing **GUIDE** again will cycle through the Full, Traditional and Mini Guide views.
- 2. Quick Bar:** Press the **ARROW** key and the Quick Bar will appear with program listings. You can use the **ARROWS** to see what's on different channels, and the **ARROWS** to see programming for different time slots. Press **EXIT** to dismiss the Quick Bar, or let it time out.
- 3. Browse while watching:** To see what's on other channels without missing a minute of what you're watching, press **GUIDE** three times and the Mini Guide will appear (make it appear sooner by changing your Guide View settings). To make a selection, press **OK** or to return to your program, press **EXIT**.
- 4. Integrated Search:** While watching TV, press the **MENU** button on your Shaw Remote and select **SEARCH**.
Learn more about how to use the Search function on page 13.
- 5. Browse by Favourites:** To access Favourites, press **MENU** and select from a variety of available pre-set categories.
To learn more reference page 22
- 6. Enter your channel number:** If you know the channel you wish to tune to, simply enter the channel number and wait as your channel changes. Remember, if a channel is carried in both SD and HD, it's always accessible in HD via the lower (SD) channel number.

Tip: Press the **GUIDE** button on your remote to cycle through the Full Screen Guide, Traditional Guide, and Mini Guide. You can change your default in Guide View settings.

Colour coding

In the guide, programming appears in a grid format with channel numbers and network logos down the left side and times along the top. Some listings have a coloured underline to help you identify different types of programs:

- Purple:** Movies
- Green:** Sports
- Orange:** Children's programs

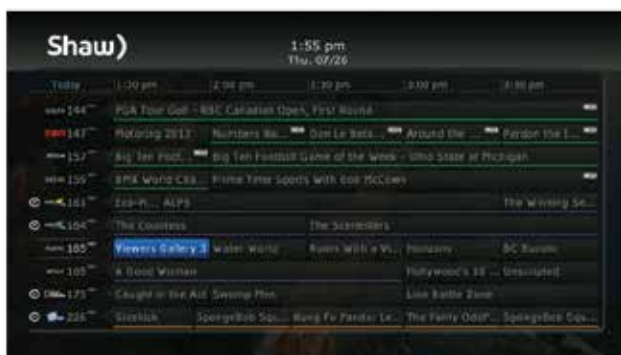

Navigating full listings

- Press **GUIDE** to access your programming guide to search for program listings for the current time and up to 2 weeks in advance
- Use the **▲ ▼ arrows** on your remote to navigate program titles, and the **arrow** **▶** to see program listings for later that day and for future days
- For faster searching:
 - Use the **PAGE UP/DOWN** buttons on your remote while in the listings
 - Or press the **DAY +/-** buttons on your remote to advance ahead a day at a time
- Press **INFO** on your remote to see detailed program information
- Highlight a program title and press **OK**. If the program is playing, you will tune to it. If the program is on later the Program Options Screen will appear, and you can set a reminder.

Learn more about Reminders on page 13.

Program options screen

HD & HDPVR

Program name

Program show card

Program start time

Add or remove this program from your custom Favourites list(s)

Set or adjust Parental Controls for this program, channel, or rating

 
Display more information about this program

HDPVR Only

Buffer indicates programs in temporary memory. Use **ARROWS** to select previous programs to play.

Set and adjust settings for this program recording

Set and adjust settings for this series recording

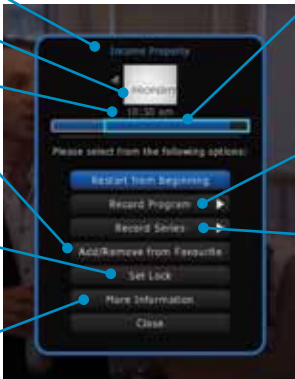

The screenshot shows the 'Recent Property' screen for a program titled 'The Simpsons'. It displays the program name, show card, and start time (10:30 am). Below this, it says 'Please select from the following options:' and lists several menu items: 'Restart from beginning', 'Record Program', 'Record Series', 'Add/Remove from Favourites', 'Set Lock', 'More Information', and 'Close'. Callouts from the text on the left point to these items: 'Program name' points to the title, 'Program show card' points to the show card, 'Program start time' points to the time, 'Add or remove this program from your custom Favourites list(s)' points to 'Add/Remove from Favourites', 'Set or adjust Parental Controls for this program, channel, or rating' points to 'Set Lock', and 'Display more information about this program' points to 'More Information'. Callouts from the text on the right point to 'Record Program' (labeled 'Set and adjust settings for this program recording') and 'Record Series' (labeled 'Set and adjust settings for this series recording').


Program information screen



If you want to access more information on a program press the **INFO** button on your remote. Here you can read a longer description about the program, as well as additional details, such as release year, rating, and run time.



Browse while watching TV uninterrupted

Quick Bar




Press **ARROW**  once to see the Quick Bar, which allows you to see what programming is coming up next.

- Press **ARROW**   to browse channels
- When you find a program you like, press **OK** to tune to that program or press **INFO** for more program details



At any time, press the **INFO** button on your remote to see the information for the program you are watching.

Mini Guide



The Mini Guide allows you to watch TV and view program listings without having to leave the program you are watching or go to the full screen guide. To access the Mini Guide, press the **GUIDE** button on your remote three times (default setting). Use the   **ARROWS** to see listings on other channels and the  **ARROW** to see future listings on the channel highlighted. At any time, press **INFO** to see additional information about that program.



Tip: Change the settings to bring up Mini Guide earlier by changing your Guide View settings. See page 27 for details.

Search

Search allows you to find a specific program by entering the first few letters of a keyword (i.e. program title, actor name).

- From the main menu, select search
 - Use the **ARROW** keys to highlight the letters you want
 - Then press **OK** to select the letter and then advance to the next letter
 - Enter at least three letters or numbers for results to display
- ARROW** over right and select the “TV Programs” tab to view results from TV programs and your PVR recordings. Selecting the “On Demand” tab will display results pulled from Shaw On Demand content
- Using your   buttons, highlight the program you want to watch and press **OK**




Tip: You can also use your key pad similar to how you would for SMS text messaging. For example, press **2** three times for the letter “C.”

 
Tip: Colour coding is available in the TV Program search tab, for quick identification of programming.



Learn more about finding your content by watching the help video “Finding Your Content”. Simply press the MENU button on your remote and select “Help.”

Reminders

Setting reminders is easier than ever. You can set Reminders so you don't miss shows you want to watch. While in the guide, simply highlight your selection, press **OK**, and select "Set/Remove Reminder." Your Reminder will appear one minute before your show is set to begin. You can access a full list of reminders by pressing  on your remote then selecting "Reminders" from the Quick Menu.

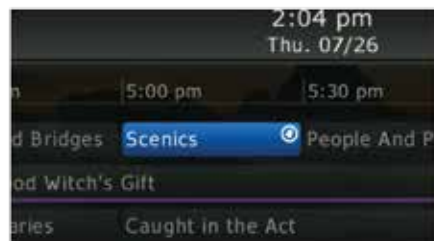

Recordings

Record your favourite programs and view them as many times as you want, whenever you want.


- Set series recordings
- Pause and rewind live television
- Rewind and replay programs so you won't miss a thing
- Built-in dual tuner lets you:
 - Record one program while watching another
 - Record two programs at the same time
 - Watch a previously recorded program while recording two other programs at the same time

Setting up recordings

There are a number of ways to record your favourite shows and TV series:

- Highlight a future program you wish to record and press **OK** to bring up the Program Options Screen
- From the Program Options Screen, select “Record program” or “Record series” and press **OK**



- You can also press **ARROW**  to set your recording options, including customized recording start and end times, and/or storage settings



- The simplest way to set a recording is to highlight the program and press the **Record** button on your remote
- Pressing the **Record** button once will bring up the Program Options Screen
- Pressing the **Record** button a second time is a short-cut to begin a single recording
- If there is a conflict (more than two programs scheduled to record at the same time), a message will appear giving you some options



Learn more about the HD Guide PVR features by watching the help video “PVR Features”. Simply press the MENU button on your remote and select “Help”.

Accessing your recordings

- Press the **LIST** button on your remote; or
- Press **MENU** and select “Recordings”

Both methods take you to the “Recordings” tab

- In this screen you can see all of your recordings, when they were recorded and what channel they were recorded from
- Using these headings, you can choose how you would like to sort your recordings by highlighting “Title”, “Channel” or “Date Recorded” and pressing **OK**
- Series recordings are grouped together in folders – highlight the folder and press **OK** to expand and see each individual recording

On this screen, you'll also see the space used on your hard drive:

- When the green bar turns yellow, your hard drive is 80% full
- When the yellow bar turns red, your hard drive is 95% full
- If your recordings are protected, an alert will pop up to let you know if you've run out of space. You will be prompted to delete some of your recordings



Note: Storage can be increased using an eSATA connected external drive. Contact us for details.

Customize your recordings

You can customize the start and end times for your single and series recordings to make sure you never miss a moment of your favourite shows.

Custom start and end times can be applied to individual recordings or as a default setting via the PVR Settings screen under Single and Series tabs. Changes to these settings will only impact new recording requests, not previously scheduled recordings.

Learn how to set your default start and end times on page 19.

Recording icons

Single Recording



Series Recording



Program scheduled to record

Actively recording program

Program was not recorded – this could be due to a number of reasons including duplicate recordings or if more than two recordings are scheduled to record at the same time

Recording management icons


Complete Recording

 


This recording has been protected from automatic deletion


Managing Recordings

Scheduled recordings

Access all of your future scheduled recordings in one place for easy management. Just press the **MENU** button on your remote, select “Recordings”, **ARROW**  to “Schedule” and press **OK**.

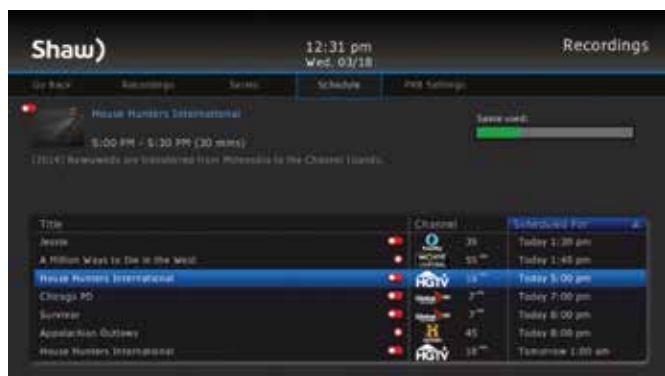

Series recording management



To access only your Series Recordings, press the **MENU** button on your remote, select “Recordings”, **ARROW**  to “Series” tab and press **OK**. Here you can change your series recording options or the series recording priority.



PVR Settings

This is where you can set the defaults for your single, series, and live recordings. You can always adjust the settings on an individual recording through the Program Options Screen, “Schedule” tab or through the “Series” tab.

You can access your PVR Settings through the Main Menu by selecting:

- “Recordings”, **ARROW**  to “PVR Settings” and select **OK**; or
- “Settings”, **ARROW**  to “PVR Recordings” and select **OK**
- Then use the **ARROW** keys and press **OK** to make your selection

Single

- Keep Until – Choose whether or not to keep your single episode recordings until space is needed on your hard drive or choose to protect them and keep only until you manually delete
 - The oldest (and non-protected) programs will delete first, if space is needed
- Start Recording Early - Set all single recordings to automatically start earlier than scheduled in the guide
- End Recordings Late - Set all single recordings to automatically be extended past the scheduled end time



Learn more about PVR Settings by watching the video “Recordings”. Simply press the MENU button on your remote and select “Settings”.

Series:

- Episodes to Record – Select “New” to record only new episodes in your series folder or select “All” to record new and repeats (with duplicates)
- Keep Until – Choose whether or not to keep your single episode recordings until space is needed on your hard drive or choose to protect them and keep only until you manually delete
- Start Recording Early - Set all series recordings to automatically start earlier than scheduled in the guide
- End Recording Late - Set all series recordings to automatically be extended past the scheduled end time
- Priority – Choose whether newly created series recordings take higher or lower priority over previously scheduled series
- Episodes to Keep – Choose how many episodes you’d like to store in your series folder. If you select a number other than “All”, the older episodes will be replaced by new episodes



Live Programs:

Live programming often runs over the time scheduled in the guide. To ensure you don't miss a thing, the guide can alert you when a program is live and you can easily lengthen the planned recording time.





- Prompt – Choose whether or not you would like to be alerted when scheduling a live recording
- Default End Time – Choose when you would like the Live recording to end. Please note, changes to Default settings will impact **newly scheduled** recordings only

 


Live TV Buffer

While watching live TV, your HDPVR automatically stores at least one hour of programming in what is called the “buffer”. You can access programming in the buffer as long as you do not change the channel.

There are a number of ways to access stored programming in the buffer:

- Simply press **REWIND** or **SKIP BACK**
- **ARROW**  to access the Quick Bar then **ARROW**  to go back to a previous program and select **OK**
- While watching live TV, press OK to bring up the Program Options Screen and use your   **ARROWS** to select a previous program

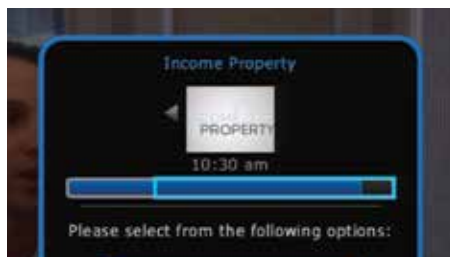

Tip: While using the Mini Guide, highlight the channel you are currently on and **ARROW** . Here you can **ARROW** to select a previous program; press **OK** to select.

Auto HD Recording


With Shaw's HD Guide, when you are subscribed to both the SD and HD version of a network, you will automatically receive the high-definition feed on the lower channel number. Therefore, your recordings on these channels will be in high-definition. This ensures you always receive the best picture quality available.

Favourites

It's okay to admit it: You love some of your programs more than others. The Favourites feature on this guide goes way beyond your Favourite channels – it's the content you want to watch right now. The Favourites feature allows you to choose your favourite channels and/or programs by selecting from a variety of pre-set categories including Sports, Kids and News.


When applying a specific Favourites list, all current programming that is not included in your Favourite criteria is filtered out, so you only browse the programming you want to watch now.

Creating Favourites lists

To create a Favourites list, select “Add Favourite” from the Main Menu or press the  button, and select “Favourites”. Choose one of the pre-defined categories to instantly apply a Favourites list to your current channel lineup.



Managing Favourites lists

For more options, use your Quick Menu. Simply press the  button on your remote and select “Favourites.”

You can change your Favourites list simply by selecting a different category and pressing OK to apply. To remove all Favourites, select ‘Stop Favourites’ and press OK.



Favourites Bar

To access your Favourites while a Favourites list is being applied:

- Press **▲ ARROW** to bring up the Favourites Bar
- Your Favourites Bar, which looks similar to your Quick Bar, displays all current filtered programming that falls within your Favourites criteria and is currently on TV
- **◀▶ ARROW** to scroll through this filtered programming



Learn more about using the Favourites function by watching the help video “Setting Up Favourites”. Simply press the MENU button on your remote and select “Help”.

Shaw On Demand

Using your Shaw Remote, you can instantly access movies, TV series and much more whenever you like.

- To access Shaw On Demand on your TV, simply press the **ON DEMAND** button on your remote. You can also access through the Main Menu or through the programming guide on certain channels marked with **Ⓢ**
- Once you're on the main On Demand landing page, you can order featured movies simply by pressing the **B** button on your remote, or choose a category to explore
- Use the **⬅️ ➡️ ARROWS** to select a genre, and press **OK** or **⬇️ ARROW** to enter the listings for that genre
- Using the **PAGE UP/DOWN** buttons will take you through pages of titles for that category
- Highlight what you want to watch using the **⬅️ ➡️ ARROWS**. Press **INFO** to see a full description of your selection
- Select **OK** to confirm your order and enjoy
- Access the entire Shaw On Demand library and choose from over 10,000 titles with thousands in HD
- On Demand content ordered will appear on your regular Shaw invoice. Adult content will be discreetly billed
- The following icons are used in Shaw On Demand to indicate:

- ✓ **Subscribed:** This is content included for free in your monthly subscription
- ✓ **Ordered:** This is content you have rented and is still available for viewing
- ! **About to expire:** This is content you have rented and will soon expire
- ★ **Wishlist:** This is content you have added to your Wishlist

Tip: Find what you want fast with the Search function on the main Shaw On Demand page. Simply enter the first few letters of a program title or actor name and your results will instantly display. To learn more about Search, go to page 13.



Wishlist

Find a movie you would like to watch at a later date? Just add it to your Wishlist. Adding movies to your Wishlist saves you time when searching for a movie you want to watch.

- Simply highlight your selection and press the **FAV/♥** button on your remote. The **★** icon will appear on the poster art
- Removing an item from your Wishlist is just as easy; simply press the **FAV/♥** button once more
- To access your Wishlist, press the **MENU** button on your Shaw Remote and select Wishlist or access your Wishlist in the On Demand store




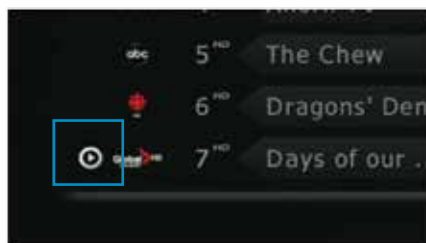 
My Orders

To access recently ordered Shaw On Demand content, simply press the **MENU** button on your Shaw Remote and select "My Orders." You can also access My Orders from the Shaw On Demand Menu.



Shaw On Demand quick launch

You can access Shaw On Demand directly through your programming guide. Simply look for the Shaw On Demand icon next to the network logo and **ARROW** . This can be found next to channels that offer On Demand content. This will take you directly to the content available from that network.



Learn more about using Shaw On Demand by watching the help video "Shaw On Demand". Simply press the MENU button on your remote and select "Help".

Events

Instantly order Pay Per View (PPV) programs and Live events like UFC® and WWE using your programming guide.

- Simply press **MENU** and select the events icon
- When you find a program or live event of interest, highlight the title and press **OK** for the Information Screen
- Follow the on-screen prompts* to complete and confirm your order

If the program is scheduled to air at a future time, a reminder is automatically set to notify you of your order before the program begins. PPV events will appear on your regular Shaw invoice.

 
*Some areas may require a toll-free call to confirm your order. The phone number will appear on your screen.



Digital Music

It's just like the music they have at bars and restaurants: no DJs, no wacky banter, no commercials, and the music is continuous. With a variety of genres available, there's something for everyone.

To access Digital Music, tune to channels 401 to 460 in the GUIDE.

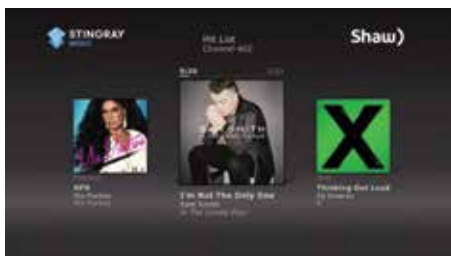

Adjusting your settings

You can activate and customize certain guide features such as your default guide view, Parental Controls, Audio settings, Language and more.



For additional help, short videos on each setting are also available to view.

To get started, press the **MENU** button and select the Settings icon. Use the **ARROWS** to select from the following setup options:



Summary

This screen shows you a summary of your key settings. For quick and easy access, you can click through to change any of these settings.



Guide

Grid Settings: Adjust the font size and transparency of the grid guides to suit your needs.



Guide Views: Select which guide view you wish to display when pressing the **GUIDE** button once, twice or three times on your remote. There are three guide views in total: Full Screen Guide, Traditional Guide and Mini Guide.



Adjusting your settings

Guide

Info Display: Customize the way the guide looks including cell colouring and hiding/ displaying program icons.



Display Bars: Adjust the length of time the Quick Bar and Favourite Bar remain on your screen.



HD grouping

Choose to group your HD channels together for easier browsing of HD content. Or, choose to have the guide display your channels in numerical order, with HD and standard definition (SD) channels mixed together.



Closed Captions

Adjust how you would like your Closed Captions to display including font size and font style.



Recordings settings

Record your favourite programs and view them as many times as you want, whenever you want.

Learn more about Recording settings on page 14.

Video setup

Select your default setting for video resolution including 720p, 1080i and 1080p. You can also set your default settings when viewing programs in standard definition by adjusting the Aspect Ratio.

If you would like to order 1080p movies from Shaw On Demand, ensure your Video Resolution is set to "1080p/1080i".



Audio settings

Select the audio settings to use with your home theatre system as well as enable DVS and SAP.



Digital box settings

Change the settings for your HD Box including:

Front Panel Display: Time or current channel, time format (12 hr or 24 hr clock) and brightness.

Power Saver: Save energy by adjusting the length of time your digital box stays powered on with no remote interaction.



Parental Controls

Set locks for movie and TV ratings, set or update your purchase PIN and enable or disable your purchase PIN.

Learn more about Parental Controls on page 30.

Reset to default

Select this option if you would like to reset any or all of your settings to the default settings.



Parental Controls

Rating locks

To lock programs according to their rating, press **Menu** and select “Settings.” From the Settings menu, select “Parental Controls.” Here you can set the max TV rating or max movie rating accessible **without** having to enter a PIN. You can also manage unrated content and hide adult programming titles. When you set a rating, you will be prompted to enter your PIN.



Purchase PIN



You also have the ability to set a Purchase PIN, preventing any unauthorized PPV or Shaw On Demand orders. Press **MENU**, select “Settings” then select “Parental Controls.”

ARROW  to the PIN tab and follow the on-screen instructions.



Channel locks

To lock a channel:

- Press **GUIDE**
- Use the   buttons to find the channel you wish to lock
- **ARROW** right to highlight a future program and select **OK**
- Select “Set/Remove Lock”
- Press **OK** and enter PIN if prompted and select “Lock this channel”



You can unlock a channel using your PIN. To unlock a channel:

- Highlight the channel you wish to unlock within the guide, select **OK**
- Here you can follow the prompts to temporarily unlock, permanently unlock or keep the channel locked

More support

Help videos

To access help videos including setting up your Favourites, how to use Shaw On Demand, finding your content and more, simply go to your Main Menu by pressing the **MENU** button on your Shaw Remote and select “Help.”



Remote guides

For a diagram on the different functions of your remote, press **MENU**, select “Help” and select “Shaw Remotes.”

Settings videos

Do you have any questions related to your Settings? Many of these questions can be answered in short how-to-videos on the Setting page. To access your Settings, press the **MENU** button and select "Settings."

Installing your HD Box or HDPVR

For quick and easy installation, visit **shaw.ca/activations** or follow the instructions included with your HD Box or HDPVR.

Warranty

Shaw provides a warranty on cable boxes and other hardware used to access Shaw's services (the "Hardware"). The warranty is for three (3) years on new Hardware, one (1) year for refurbished Hardware, and covers defects in materials and workmanship under normal use. The warranty period begins on the date of original purchase of the Hardware from Shaw or an authorized reseller. Any Hardware or part of the Hardware replaced pursuant to a warranty claim will not extend the warranty period. Refurbished Hardware or parts may be used to replace or repair any damaged Hardware covered by this warranty. If Hardware needs to be replaced, Shaw reserves the right to replace the Hardware with a different model that provides comparable functionality as the original product. Warranty claims must be submitted to Shaw within the applicable warranty period.

The above warranty does not extend to (i) Hardware subjected to accident, misuse, neglect, alteration, modification and/or customization, improper handling, improper storage, improper use, improper installation or unauthorized repair, or (ii) cosmetic problems or defects which result from normal wear and tear under ordinary use of the Hardware.

The warranty provided above is in lieu of and excludes all other liabilities, warranties, guarantees or conditions written or oral, statutory, common law, expressed or implied, including warranties or implied conditions as to non-infringement, merchantability or fitness for a particular purpose and shall constitute Shaw's sole obligation and liability and the original purchaser's sole remedy in contract, tort or otherwise in respect of the Hardware.

